

PARTS LIST (LNF-32Q)

*WHEN ORDERING SPARE PARTS, PLEASE STATE ITEM No, PART NO. AND DESCRIPTION.

ITEM	PART NO	DESCRIPTION	QTY	ITEM	PART NO	DESCRIPTION	QTY	ITEM	PART NO	DESCRIPTION	QTY
01	HS05080BW-20	HEX. SOC. HD. BOLT+SW	4	40A	15104501A	TRIGGER ASSEMBLY	1				
03	11000301	CAP	1	41A	13104101A	LATCH**	1				
04	12100401	SEAL**	1	42	US05080B-20	UM. HD. BOLT	2				
05	12100501	SPRING**	1	43	SW0400W	SPRING WASHER	2				
06	OR13824N	O RING**	1	44	11504401	DRIVER GUIDE COVER	1				
07	11000701	CAP SEAL**	1	44A	11504401A	DRIVER GUIDE COVER ASM	1				
08A	12100801A	HEAD VALVE ASM.	1	45	12104501	SET PLATE	1				
11	OR31824N	O RING**	1	46	HS04070B-12	HEX. SOC. HD. BOLT	2				
12	11001201	COLLAR	1	47	11004703	DRIVER GUIDE	1				
13-1	OR22431N	O RING**	1	48	11004803	MAGAZINE COVER	1				
13-2	11001303	PISTON RING	1	49	SS04070B-12	SET SCREW	1				
14A-1	11001401A	DRIVER ASSEMBLY**	1	50	11505001	MAGAZINE	1				
14A-2	11001402A	DRIVER ASSEMBLY**	1	51	HS04070BW-08	HEX. SOC. HD. BOLT+SW	4				
18	OR43526N	O RING**	1	52	11005201	TAIL COVER	1				
19-1	11001904	CYLINDER	1	53	12105301	PUSHER	1				
19-2	11001904G	CYLINDER	1	54	12105401	SPRING**	1				
19-3	11001903	COLLAR	1	55	12105501	NAIL GUIDE LINER	1				
20	11002001	BUMPER**	1	57	HS05080B-07	HEX. SOC. HD. BOLT	1				
21	OR32025N	O RING**	1	61A	12106101A	BRACKET ASSEMBLY	1				
22	OR29826N	O RING**	1	64	HS05080B-16	HEX. SOC. HD. BOLT	1				
23	11002301	BODY	1	65	LN0500N	LOCK NUT	2				
24	OR01919N	O RING**	2	66	11106601	COVER	1				
25	12102501	JOINT GUIDE	1	67	12106401	AIR PLUG	1				
26	11002601	SPRING	1	68	OR40030N	O RING**	1				
27	11002702	GUIDE SAFETY LEVER	1	72	11007201	SPRING	1				
31	11003101	SAFETY LEVER	1	74	11007401	EXHAUST COVER	1				
32	11103201	STEPPED PIN	2	75	US05080B1-16	UM. HD. BOLT	1				
33	OR02519N	O RING	1	76	RP3020S	ROLLED PIN	1				
34	11003401	TRIGGER VALVE HEAD	1								
35	11003503	TRIGGER VALVE STEM	1								
36	OR02515V	O RING**	1								
37	OR10719N	O RING**	1								
38	11003803	TRIGGER VALVE GUIDE	1								
39	11006901	SPRING	1								